


Bilge Auto/Man Wiring Diagram (VJD2-U__B body)

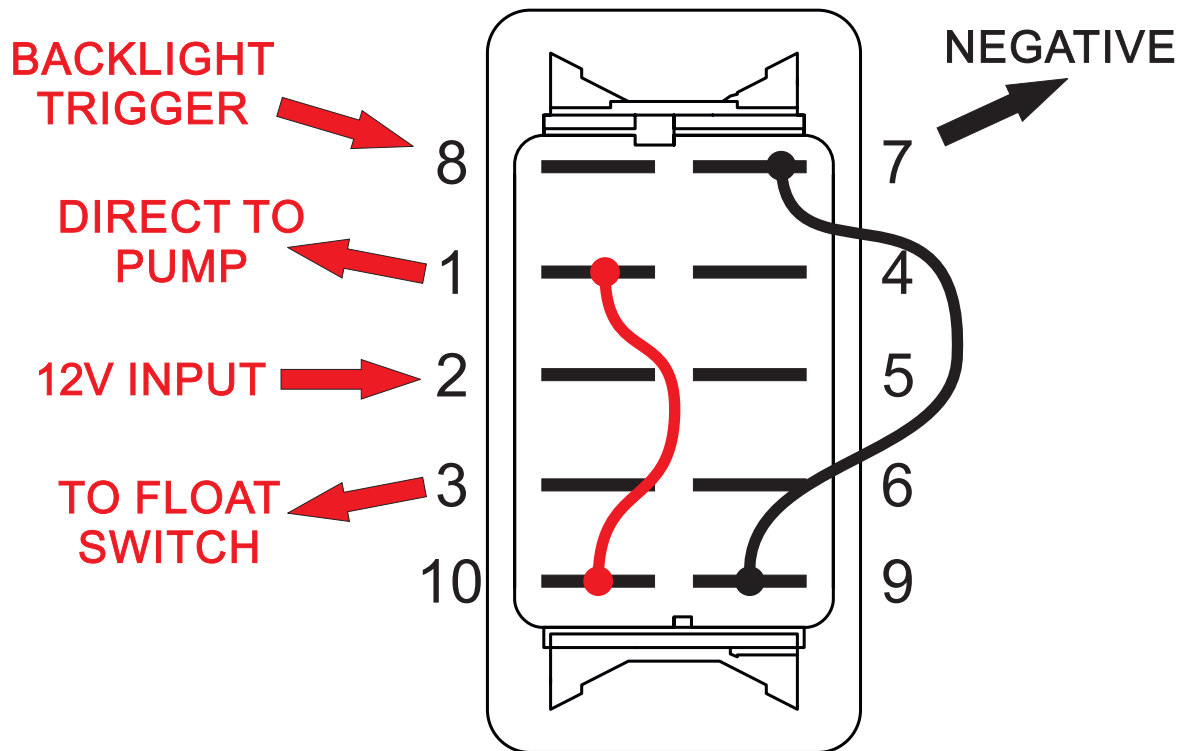

One jumper required between terminals 1 and 10 (positive)
One jumper required between terminals 7 and 9 (negative)

The oval indicator will illuminate when the pump is running, whether that be via the DOWN (manual) mode, or in the UP (auto mode), AND the float switch floats.

