

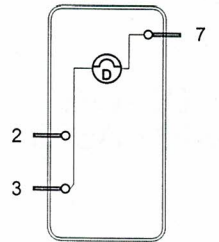
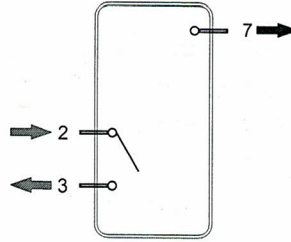
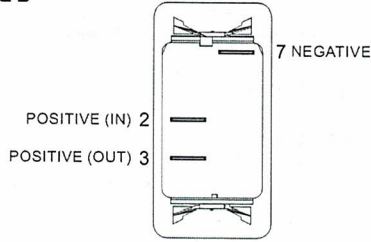
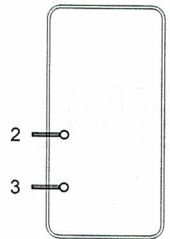





## ON-OFF V1D1-B60B

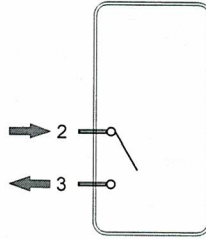




## ON-OFF or (ON)-OFF V \_ D1-S00B

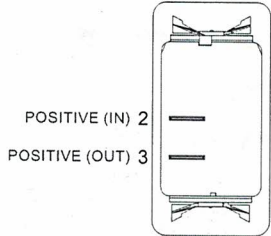




## ON-OFF-ON VJD1-D66B

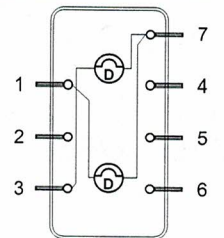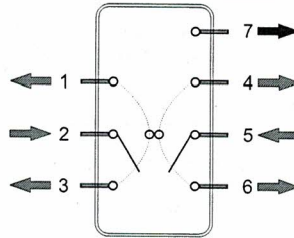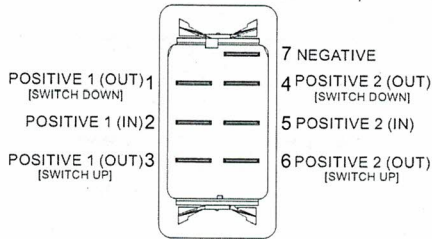




## (ON)-OFF-(ON) VLD1-A \_ 0B

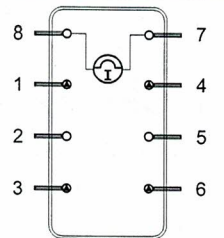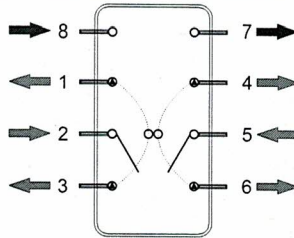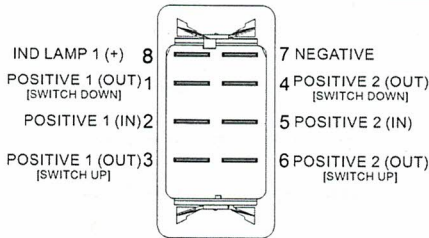




## ON-OFF V1D1-G \_ \_ B

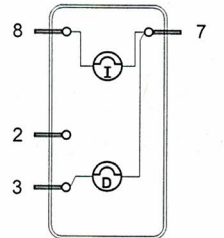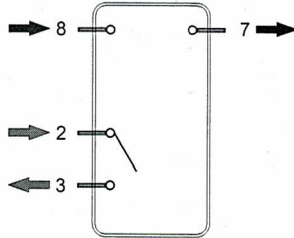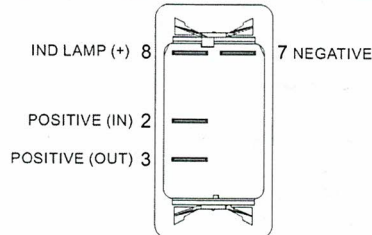




## (ON)-OFF V2D1-A \_ 0B

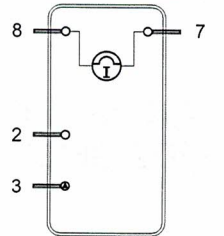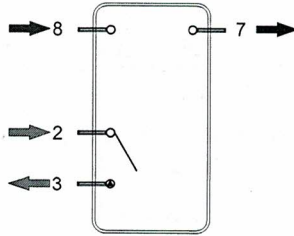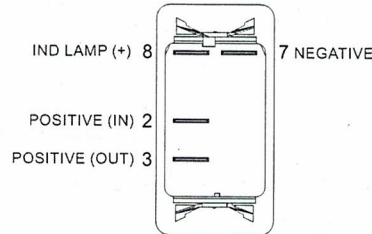




## ON-OFF-ON VJD2-U \_ \_ B

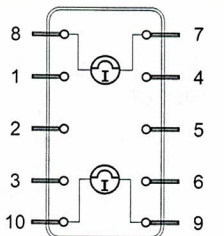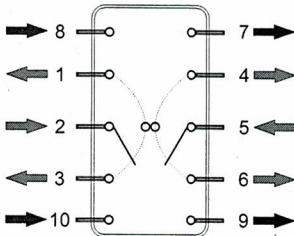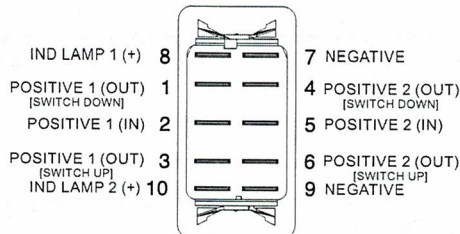




## ON-ON V4D1-A60B

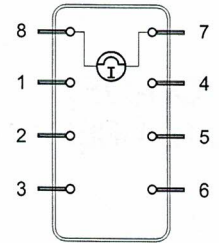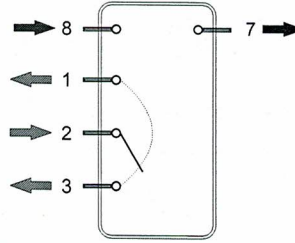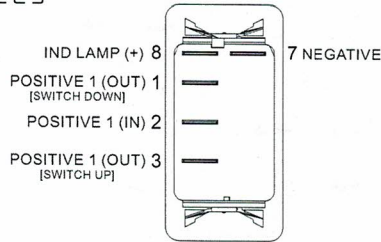




## ON-OFF-(ON) V7D1-A60B

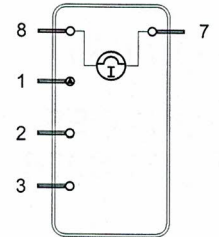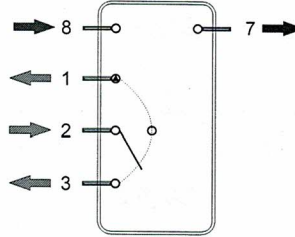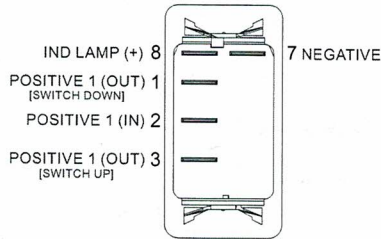




## ON-OFF [DP] VAD1-G66B

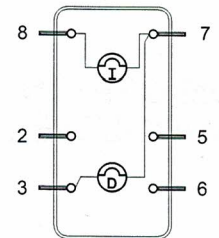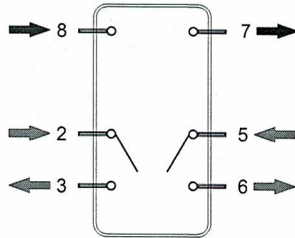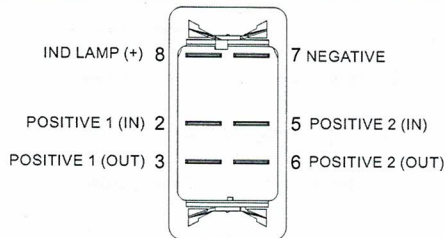




## (ON)-OFF-(ON) VLD1-S00B

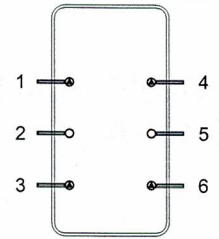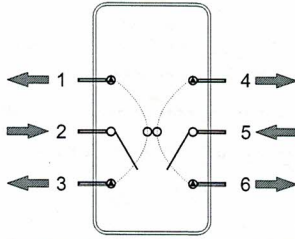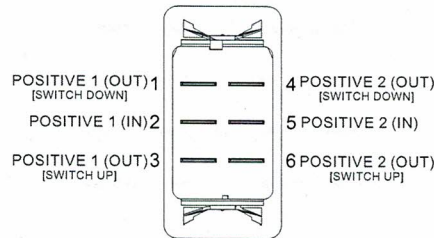

## (ON)-OFF-(ON) V8D1-S00B

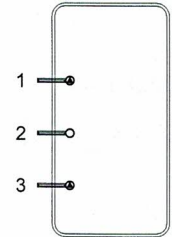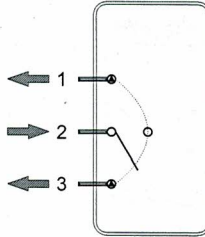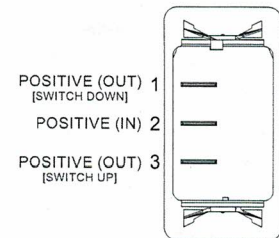

## (ON)-ON-OFF VMDJ-G66B

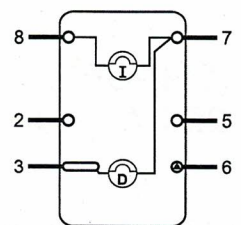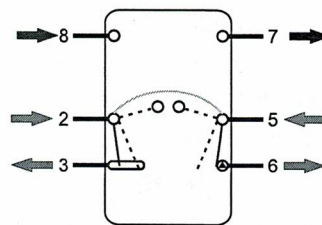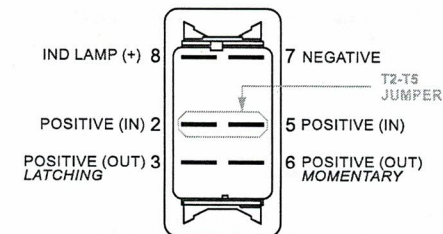

DOWN - OFF  
MIDDLE - ON (latching) Terminal 3  
UP - (ON) (momentary) Terminal 3 and 6

----- OTHER POSITION

===== TWO POSITION CONTACT

1. This switch comes with a pre-installed, but removable (external) jumper between terminals 2 and 5. It is normally left in place, unless the user wanted to separate the momentary and latching positions.
2. The latching center ON position is between terminals 2 and 3
3. The momentary top (ON) position is between terminals 5 and 6
4. The latching center ON position is maintained, while the momentary top (ON) position is being pressed
5. Common uses: START / RUN / OFF - for engine switches  
WASH / WIPER / OFF - for wiper/washer fluid switches